

RIFFEL
GIPFEL DES ERFOLGS

 
www.riffelappliances.de

VACUUM CLEANER

Instruction Manual

RIFFEL

tornado

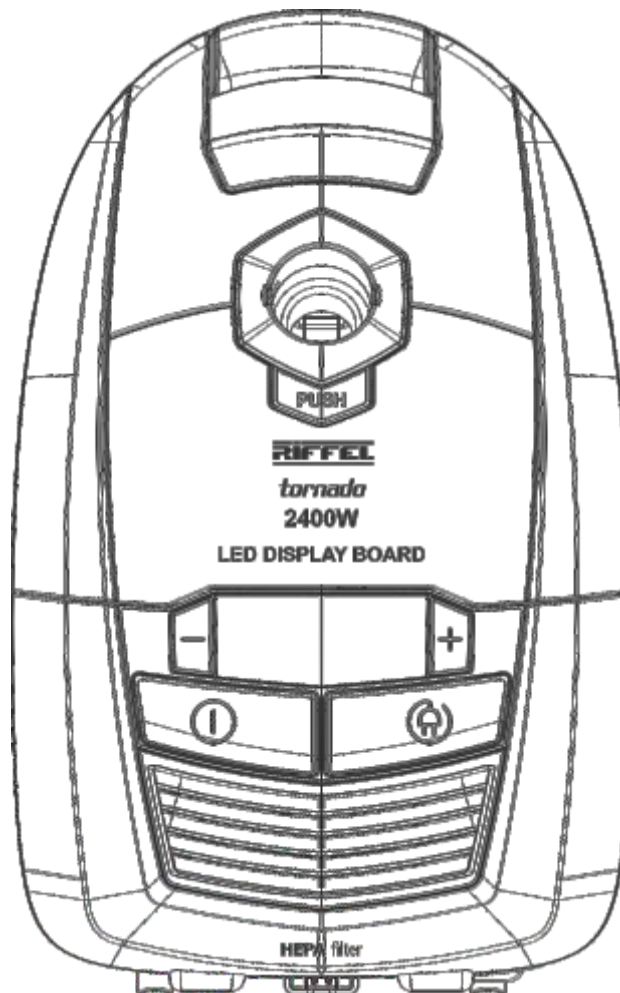

MODEL NO: VCB52B14U

**PLEASE READ THIS MANUAL CAREFULLY BEFORE
USING AND KEEP IT PROPERLY FOR FUTURE USE**

IMPORTANT SAFETY INSTRUCTIONS

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If applicable, pass these instructions on to the next owner of the appliance.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling

- ñ Before turning on, ensure that your electrical voltage and circuit frequency correspond to those indicated on the appliance.
- ñ To reduce the risk of electrocution, never operate this product or handle the plug with wet hands, submerge it under water or spill liquids into the product.
- ñ Do not insert any objects into the appliance.
- ñ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or an appropriately qualified person in order to avoid a hazard.
- ñ Check the appliance and cord regularly for visible damage. Do not use it if the cord or housing is damaged, if it has been dropped, damaged, left outdoors or dropped into water, or if it appears faulty in any way. Call the after sales support line if any part appears damaged.
- ñ Do not kink, bend, squash, strain or damage the power cord.
- ñ Do not pull or carry the vacuum cleaner by the cord. Do not use the cord as a handle, close a door on the cord or pull the cord around sharp edges or corners.
Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
- ñ Turn off the vacuum cleaner controls before connecting or disconnecting it from the mains supply.
- ñ **WARNING:** Always switch off and unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories and before emptying or cleaning the dust tank.
- ñ Do not pull on the cord to disconnect the plug from the power supply. To unplug, grasp the plug, not the cord, and gently pull it out of the power point and then press the cord retraction button to retract the cord.

Usage conditions and restrictions

- ñ This appliance is intended for household use only. It is neither suitable for commercial/industrial nor for outdoor use.
- ñ Only use the vacuum cleaner on dry, indoor surfaces, as described in this manual and with the original accessories supplied by the manufacturer/distributor.
Do not use it for any purpose other than described in this manual.
- ñ Improper installation and use may result in the risk of fire, electric shock and/ or injury to persons. We assume no liability for any eventual damages caused by improper or faulty use.
- ñ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- ñ Supervise young children to ensure they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children.
- ñ Never leave the appliance unattended.

Safe usage

- ñ Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
- ñ Keep the end of the hose, wands and other openings away from your face and body.
- ñ Do not point the vacuum cleaner at people or animals when in use.
- ñ Do not use the product without the filters in place.
- ñ Take extra care when vacuuming on stairs.
- ñ Do not use the vacuum cleaner to pick up: flammable or combustible fluids (such as fuel or solvent); burning substances (such as ash, cigarettes or hot coals), or use it in the presence of explosive liquids or vapours; hard or sharp objects such as shards of glass, nails, coins; harmful or toxic materials (such as chlorine bleach, ammonia, drain cleaner); any liquids, or vacuum in areas where liquids may be present.
- ñ Keep the vacuum cleaner away from heat sources (radiator, oven etc.), direct sunlight, moisture and sharp edges.


- ñ Keep all openings free of dust, lint, hair or anything that may reduce the airflow.
Do not use the product with any openings blocked or restricted airflow.
- ñ Put the vacuum cleaner away after every use to prevent anyone tripping over it.
- ñ **IMPORTANT:** Washing the filters improves vacuum performance. Make sure all filters are completely dry before reattaching them.
- ñ Only clean the housing with a soft, dry cloth. Do not use liquid or aerosol cleaners.

- ñ Store the vacuum cleaner indoors in a cool, dry area, out of reach of young children.
- ñ Never attempt to open the motor base of the vacuum cleaner yourself or to replace the power cord. If the vacuum cleaner is damaged, it must be repaired by the manufacturer or its service agent or an appropriately qualified person in order to avoid a hazard. In case of damage, call the after sales support line for advice.

WARNING!

- ñ Never use this machine when the suction power becomes very weak.
When this happens:
 - ñ Switch off the unit, unplug it and check whether the dust container is full.
 - ñ Then check if any part of the floor brush, tube or hose is blocked.
 Do not use the vacuum cleaner until the blockage is removed and it operates normally again.
If you cannot solve the problem, contact the after sales support line.
- ñ Always switch the vacuum cleaner off after use, and before plugging it in again, make sure to hold the vacuum cleaner firmly when using it.
- ñ Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dust bag, or before connecting/ disconnecting the attachments.

PARTS

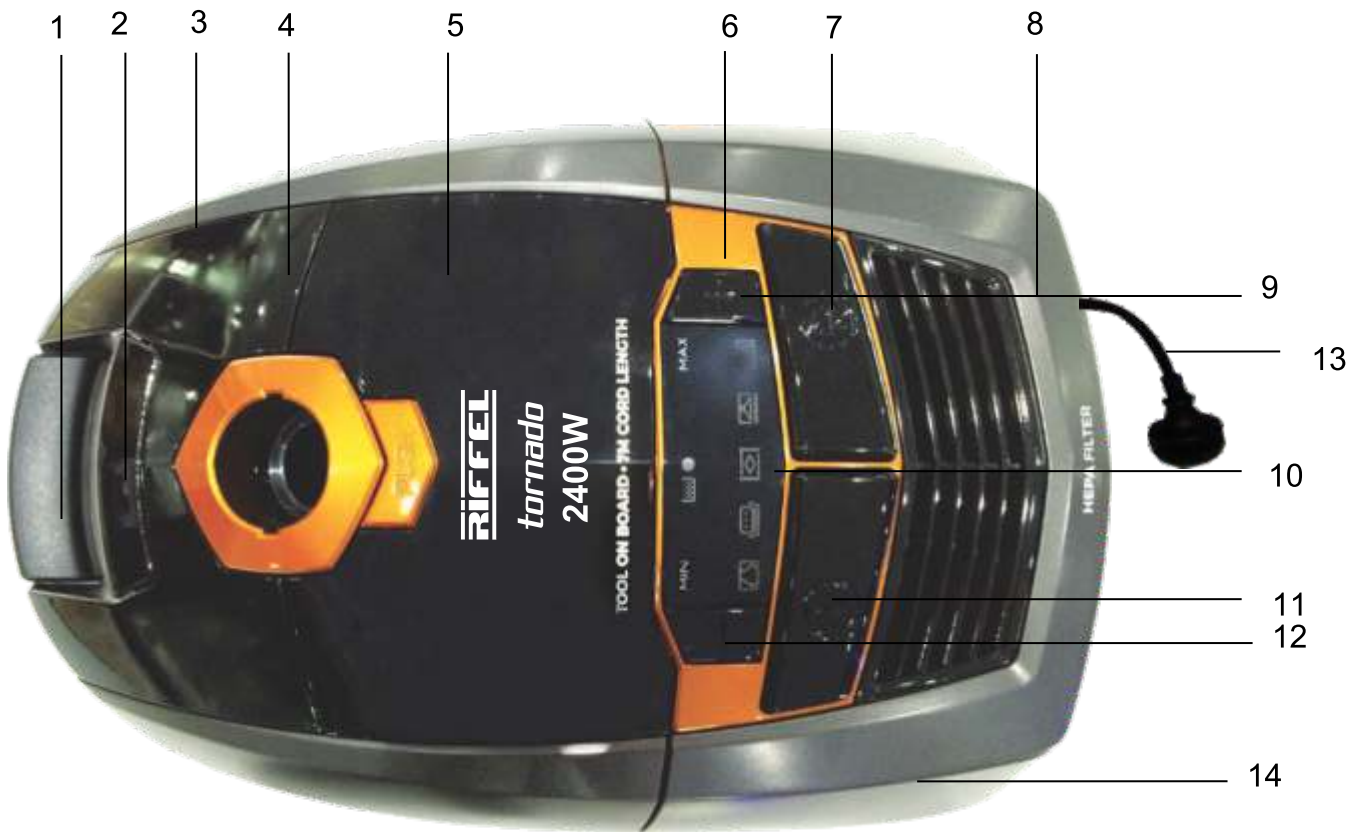

- | | | |
|---------------------------------|--------------------------------|---------------------------------|
| 1. Handle | 6. Back Cover | 11 ON/OFF switch button |
| 2. Lock clip | 7. Cord rewinding button | 12 Vacuum power decrease button |
| 3. Front cover | 8. Outlet plate | 13 power cord and plug |
| 4. Front cover decorating plate | 9 Vacuum power increase button | 14 main body |
| 5 Accessories cover | 10 LED display plate | |

Accessory List

A set of hose accessories, one metal tube, one floor brush, one suction nozzle , one round brush ,one square brush

Operation Methods

1. Connect the hose accessory: insert the hose end into the hose socket at the front cover and then hook it.(Fig 1)
Remove the hose accessory: turn the connector of hose to the right position and then pull the hose accessory. (Fig 2)
2. Connect the metal tube to the curved end of the hose. (Fig 3)
3. Connect different nozzle tools to the tube for different cleaning purposes: floor brush (adjusted to the type of ground) for carpet or hard floor (Fig 4);crevice nozzle for sofa, wall surface, curtain ,corner of space between furniture and etc. (Fig 5)
Your vacuum cleaner is now ready for use.
4. Operating the vacuum cleaner: insert the plug and cord into the power socket which conforms to that on the label for the power supply, and press the on/off switch pedal, the vacuum cleaner will start working. (Fig 6)
5. Adjust the vacuum power: Use the symbols on the vacuum power display as a guideline, press the +button(increase vacuum power) or the –button(reduce the vacuum power). (Fig 7)



Curtains textiles(lowest setting)



Upholstery cushions(sofa,high class carpets, rugs and runners)



Slightly soiled carpets and hard floors



Long-haired carpets



 
Hard floors with coarse dirt(highest setting)

To set the desired power setting, press the +button(increase vacuum power) or the –button(reduce the vacuum power) several times until the desired setting lights up on the vacuum power display.

6. Move the machine: carry the handle at the back of vacuum. (Fig 8)
7. Cord rewinding: Switch off the vacuum cleaner with on/off switch button and pull the plug from the main socket, press the cord rewinding button, the power cord will be drawn in. (Fig 9)



1

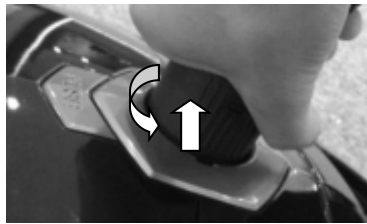

2



3



4



5



6



7



8



9

Maintenance

1. Change the dust bag: when the dust full indicator turns red or loss of suction is noticed, it is time to clear the dust bag or replace with a new bag. (Fig 10)
 - ò Open the front cover by clipping. (Fig 11)
 - ò Take out the bag holder then remove the full dust bag. (Fig 12)

Installing the dust bag: insert the dust bag into the bag holder and then put it in the slot cabinet. (Fig 13)

Note: If the dust bag is not installed, the front cover can't be closed

2. Inlet filter: clean the filter with warm water and allow to dry fully before placing back into the unit. (Fig 14)
Replacing the inlet filter: clip down and remove the inlet cover, remove and replace with a suitable filter. (Fig 15)
3. Clean the outlet filter: open the outlet cover and take out the HEPA frame and filter. Wash it and install it after the filter has fully dried.(Fig 16/17)



10



11



12



13



 
14



15



16

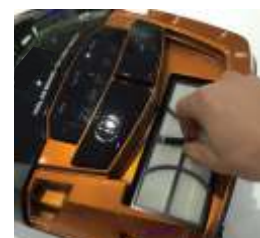

17

Warning

The plug must be removed from the power socket before any maintenance or replacement.
If the power cord is damaged, it must be replaced by the manufacturer or its service agent or an appropriately qualified person in order to avoid a hazard.

RIFFEL

www.riffelappliances.de